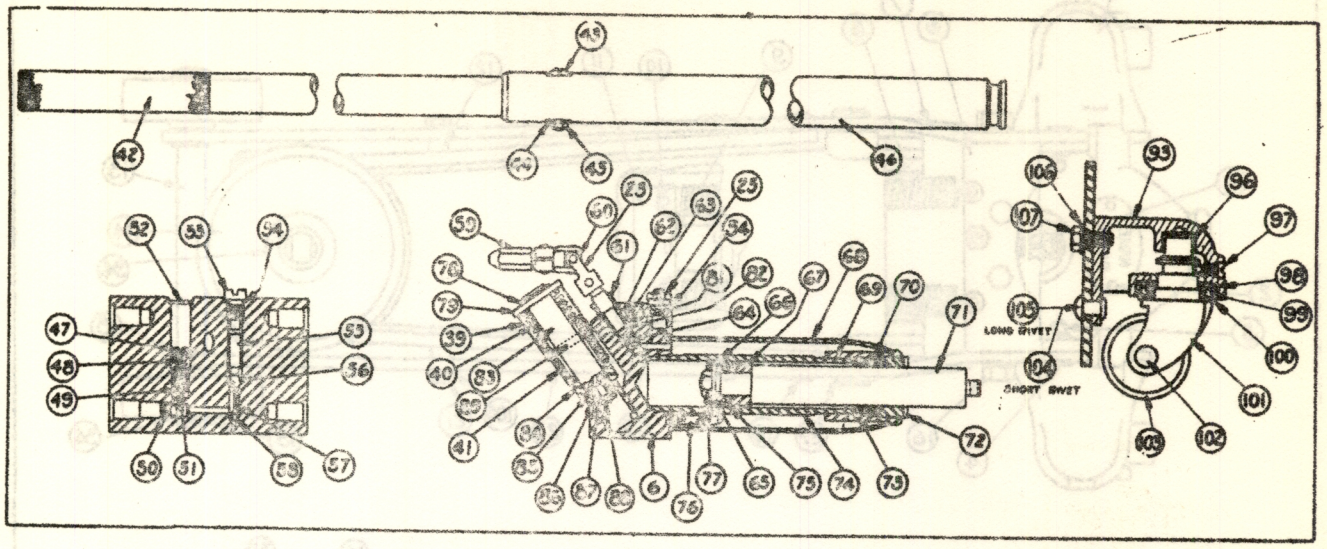

Code No.	Part No.	Name of Part	Used On Series	Changes and Replacements
65	204286	Steel washer, ram cup	ABC	was Z-743
66	200501	Cup leather, ram	ABC	was WH-5091
67	G-19681	Ram Steel collar	ABC	
68	G-19641	Oil Tank	ABC	
69	G-19631	Tank Nut	ABC	
70	202013	Packing Ring, ram (2)	ABC	was G-18811
70	210703	Packing Ring, ram (2)	ABC	was G-21991
71	G-19671	Ram	ABC	
72	G-16431	Packing nut, ram	ABC	
73	G-19651	Ram Guide Ring	ABC	
74	G-19661	Cylinder, Ram	ABC	
75	G-19691	Ram Brass collar	ABC	
76	G-19431	Suction Screen	ABC	
77	203287	1/2 hex nut, ram cup	ABC	was Z-925
78	201803	11/16 Ret washer, pump	ABC	was Z-979
79	G-21161	Cover, pump sleeve	ABC	
80	G-19561	Fulcrum pin	AB	see 210700
80	210700	Fulcrum pin	C	was G-19561
81	WH-5241	Snap Ring washer, release	ABC	
82	WH-5251	Snap ring, release	ABC	
83	G-19791	Pump Piston	ABC	
84	G-19481	Pump Cylinder	ABC	
85	201828	11/16 Chevrons, Pump (3)	ABC	was G-19811
86	G-19821	Composition Ring, Pump	ABC	
87	204233	Steel washer, pump Chevrons	ABC	was Z-960
88	203337	Hex Nut, Pump chevrons	ABC	was Z-346
89	201142	Cross Pin, pump	ABC	was Z-980
90	204304	Steel washer, hdle skt spacer (2)	ABC	was Z-970
93	G-2753	Bracket, rear caster (2)	ABC	
94	G-20771	Cap Stud	ABC	
95	G-8172	Cap Housing	ABC	
96	G-16821	Bushings, caster Fork Stem (2)	ABC	
97	G-16891	Ret screw, Caster Fork (2)	ABC	
98	G-16401	Ball race, upper (2)	ABC	
99	203231	1/4 Ball, casters (42)	ABC	was Z-895
100	G-16461	Ball Race, lower (2)	ABC	
101	G-16991	Fork, rear wheel (2)	ABC	
102	G-18971	Axle, rear wheels (2)	ABC	
103	G-16981	Rear Wheels (2)	ABC	
104	202875	Rd hd Rivet, casters (2)	ABC	was Z-658
105	202891	Rd hd Rivet, casters (2)	ABC	was Z-405
106	201789	3/8 lockwasher (4)	ABC	was Z-842
107	205925	Hex Hd Bolt, Caster Brkt (2)	ABC	was Z-707
	204303	Steel Washer, hdle skt (2)	C	

Order by part number, not code number.

Service Parts—Walker Hydraulic Jack, Model 767

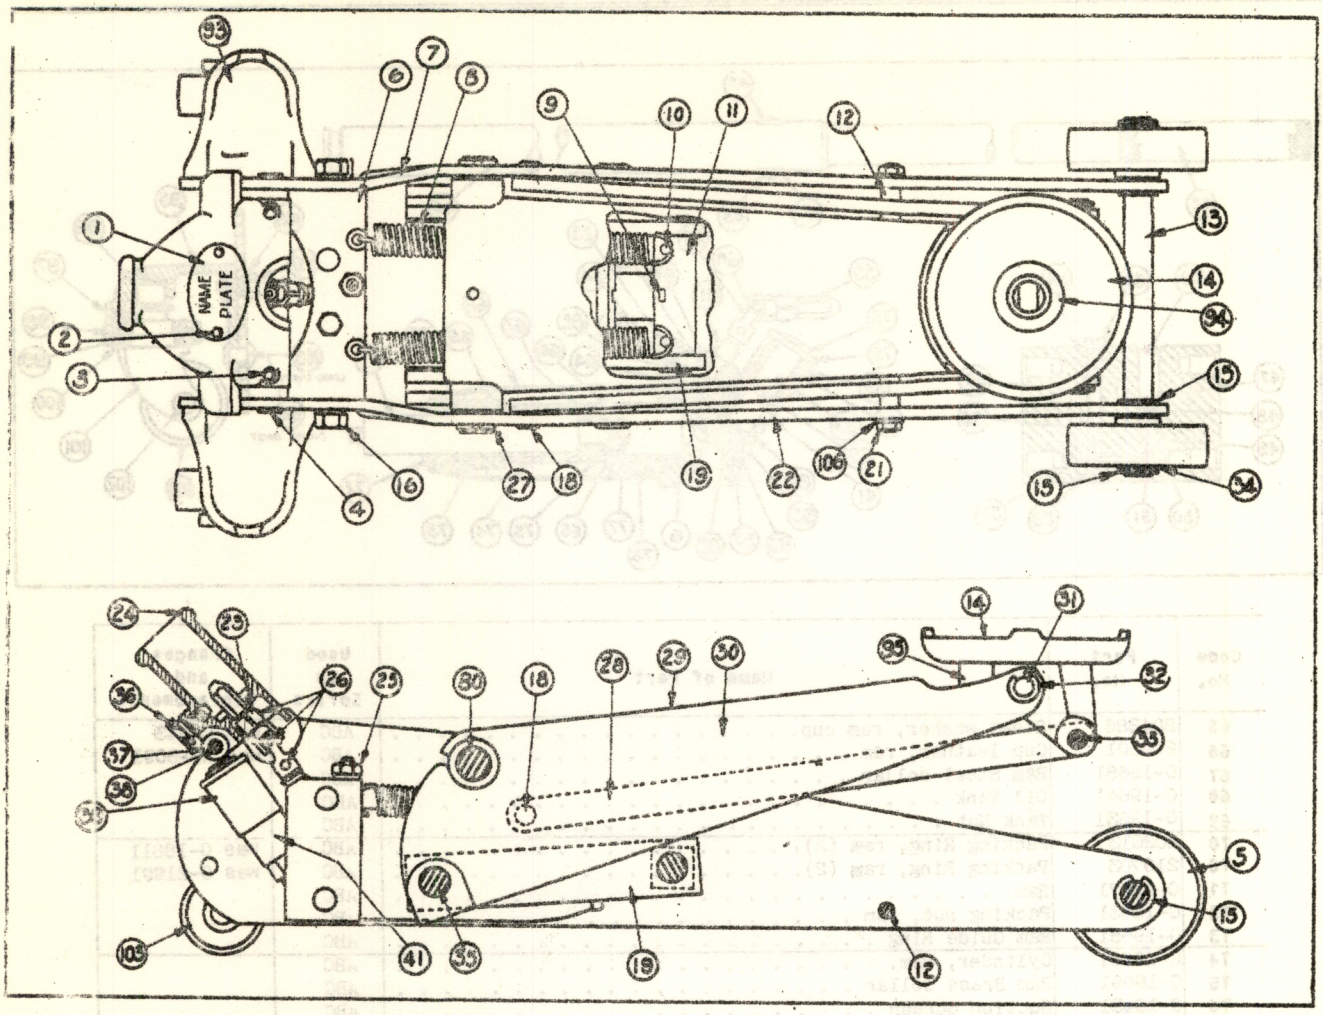

Code No.	Part No.	Name of Part	Used On Series	Changes and Replacements
44	209962	5/16 lockwashers, hdle jt.	ABC	was Z-173
45	203342	5/8 hex nut, hdle jt	ABC	was Z-982
46	901285	Lower Handle Assembly.	ABC	
47	WH-231	Adj. Nut, Safety	ABC	
48	WH-1841	Spring, Safety valve	ABC	
49	WH-2151	Adapter, Safety.	ABC	
50	205493	1/8 Pipe plug.	ABC	was Z-628
51	203197	3/16 Ball, Safety valve.	ABC	was Z-741
52	201733	Expansion plug	ABC	was Z-914
53	G-16651	Pressure Plug.	ABC	
54	204842	Gasket, copper, Filler & Press (2)	ABC	was Z-932
55	G-19751	Discharge Spacer	ABC	
56	203201	5/16 Ball, Discharge	ABC	was Z-720
57	G-18121	Suction spacer..	ABC	
58	203198	7/32 Ball, suction valve	ABC	was Z-510
59	G-19521	Hex Plug, release.	ABC	
60	G-16911	Universal Block.	ABC	
61	G-20351	Gland Nut, release	A	see G-23361
61	G-23361	Gland Nut, release	BC	was G-20351
62	201990	Packing, release (2)	ABC	was WH-5261
63	WH-6381	Retaining Washer, release.	ABC	
64	G-20701	Release Stem	A	see G-23291
64	G-23291	Release Stem	BC	was G-20701
64	G-23311	Washer, Rel Pack nut	B	
64	G-23351	Locknut, Rel gland nut	BC	
64	204255	Steel washer, release.	BC	

Order by part number, not code number.